

How to use the Presenter:

1. Insert two AAA batteries in the RF Media Pointer.
2. Plug the receiver unit into any USB port.



ID identification

The Media Pointer ID has been factory preset.


The 2.4GHz DSSS technology works up to 10 meters and has a anti-interference function.

Media Pointer features:

1. Power switch and mode switch.
(P for presenter mode; M for media mode)
2. The mini receiver can be stored inside the Media Pointer for easy storage.



Button Functions:

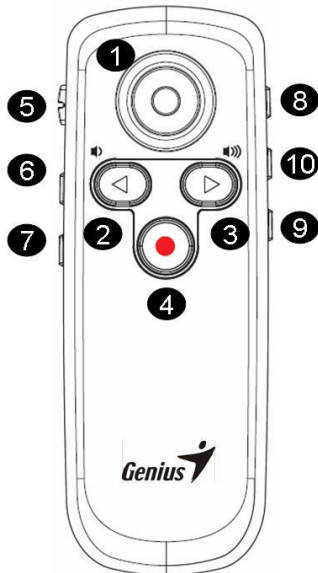

		Presenter mode	Media mode
1		Mouse Sensor	Mouse Sensor
2		Previous Page	Volume Down
3		Next Page	Volume Up
4		Laser point	Laser point
5		Switch Mode	Switch Mode
6	F5	F5/ESC	N/A
7	Blank	Blank screen	N/A
8		N/A	Fast Forward
9		N/A	Rewind
10		N/A	Play / Pause

